


Pressure • Temperature • Humidity • Air Velocity • Airflow • Sound level

KX SERIES INCLINED LIQUID COLUMN MANOMETER

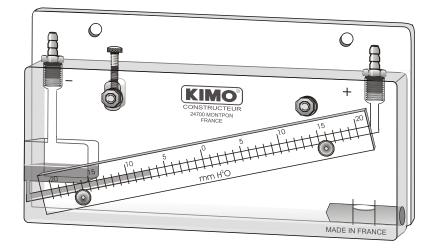

The KX range of inclined liquid column manometers, developed and manufactured by KIMO, measure slight variations in pressure, depression or differential pressure of air or gas.

They are for use in the following applications : treatment of air, ventilation, air conditioning, heating, dust elimination...


- Scale with centered zero.
- Possibility for measuring positive and negative pressures.
- Zero adjusting by moving the slide strip.
- Integrated spirit level for adjusting horizontality.
- Comes with a white PVC support, 2 screws and 2 rawlplugs, two 487 connectors and a bottle of AWS 10 liquid.

REFERENCE	MEASUREMENT RANGE			SENSITIVITY S	SCALE	RESOLUTION	
	mm CE	Pascal	In WG	for 1 mm CE or 10 Pa	for 0.1 In WG	RESOLUTION	
KX 205	25-0-25	250-0-250	1-0-1	3 mm	7.62 mm	1 mm CE or 10 Pa or 0.02 In WG	
KX 404	40-0-40	400-0-400	1.6-0-1.6	2.5 mm	6.36 mm	1 mm CE or 10 Pa or 0.02 In WG	

MEASUREMENT RANGE

CHARACTERISTICS

- Recommended range of use : +5 to 30°C.
- Possible range of use : -30 to 60°C.
- Maximum static pressure : 6 bars.
- Manometer body : transparent 15 mm thick Altuglas.
- Liquid column : entirely bored in the solid block, Ø 4mm.
- Graduated slide strip : transparent Altuglas. Cross-section 20 x 2 mm.
- Zero adjustment by moving the graduated slide strip, travel 12 mm. Fixed in place via milled, nickel-plated brass screw.
- Horizontal positioning via integrated spirit level and milled, nickel-plated brass adjusting screw, vertical travel 12 mm.
- Manometric liquid : AWS 10 red oil, density 0.87 at 15°C.
- Reservoir capacity : 20 ml.
- Connection : Ø 5x8 mm semi-rigit crystal tube, on Ø 6.2 mm ribbed, nickel-plated brass connectors, 1/8 gas thread.
- Wall-mounted with or without white PVC support.

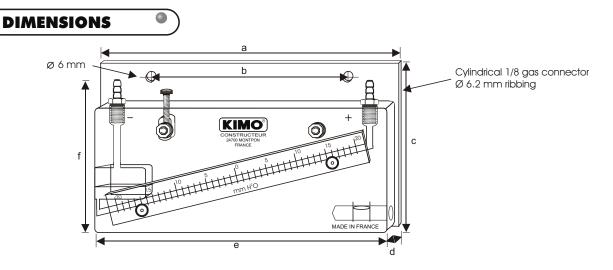

REFERENCE	а	b	С	d	е	f	Weight
KX 205	178 mm	110 mm	117 mm	25 mm	174 mm	109 mm	420 g
KX 404	219 mm	151 mm	154 mm	25 mm	215 mm	129 mm	660 g

MOUNTING

Mount the manometer on a wall or a vertical partition wall with two maximum \emptyset 5 screws. Set horizontality by using the integrated level and the milled adjusting screw. Unscrew the connector on the reservoir and slowly pour the manometric liquid to zero point on the graduation. Remount the connector without overtightening. Connect the manometer with the \emptyset 5x8 mm crystal tube to the pressure or depression source to be checked.

NOTE :

- For a pressure measurement : connect the crystal tube to the right-hand connnector (+).
- For a depression measurement : connect the crystal tube to the left-hand connector (-).
- For a differential pressure measurement : connect the highest pressure to the right-hand connector (+) and the lowest pressure to the left-hand connector (-).

MAINTENANCE : KX manometers require no special maintenance other than simply changing the reading liquid once a year.

Distributed by :

www.kimo.fr

